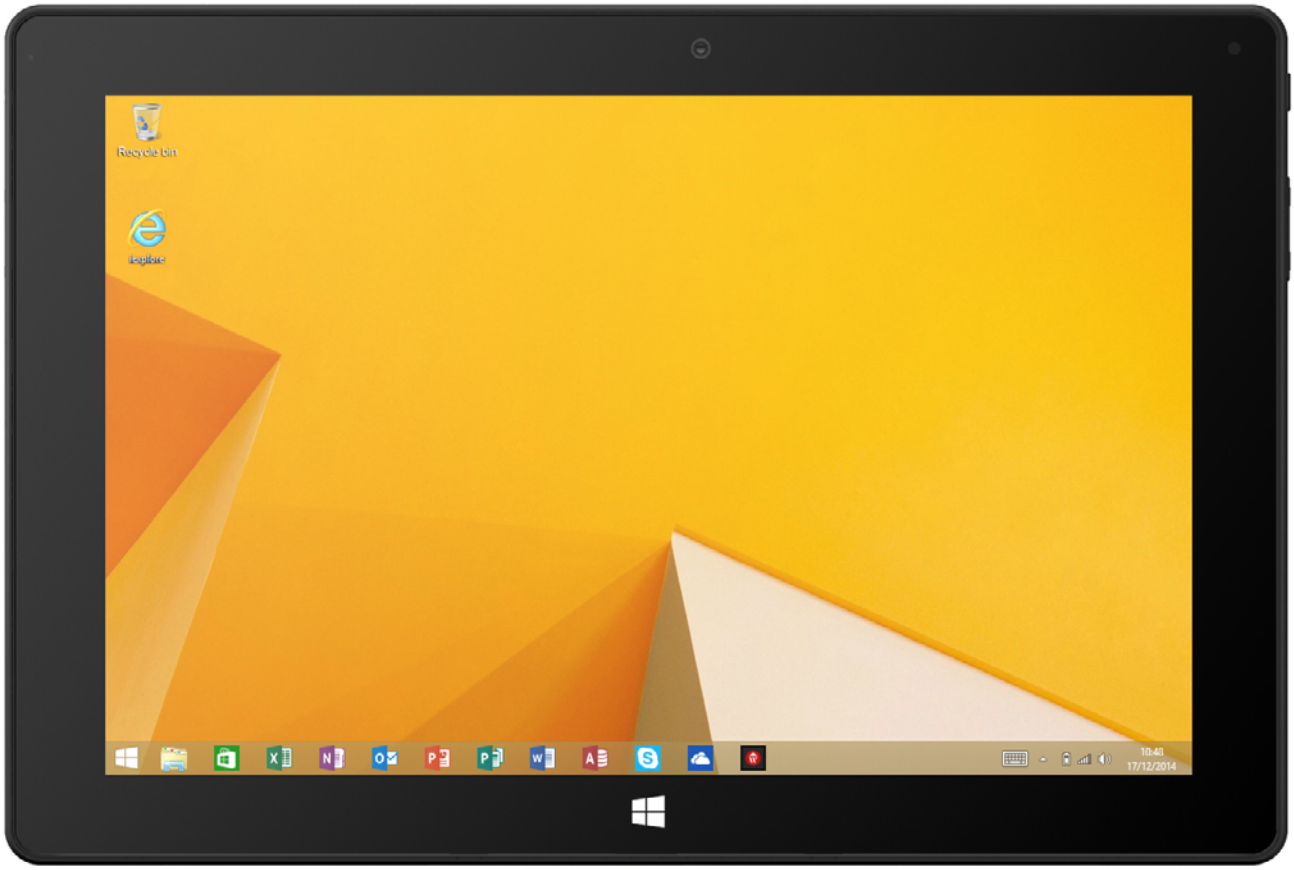

Tesla 2 W8

Complete User Manual

Tesla 2 W8

The bq team would like to thank you for purchasing your new Tesla 2 W8 tablet. We hope you enjoy using it.

With this device, you can browse the internet, check your email, play games, use apps (which you can download directly onto the device), read e-books, transfer files via Bluetooth®, record audio, watch movies, take photos and videos, listen to music, chat with your friends and family.

About This Manual

- To make sure that you use your tablet correctly, please read this manual carefully before you start using it
- Some of the images and screenshots shown in this manual may differ slightly from those of the final product.
- Due to firmware updates, it is possible that some of the information in this manual does not correspond exactly to the operation of your device. To obtain the most up-to-date version of this manual, please go to www.bq.com.
- bq shall not be held liable for any issues relating to performance or compatibility resulting from modification of the registry settings by the user. Nor shall it be held liable for any incompatibility issues with third-party applications available through the app stores.

Icon guide

Danger: This icon indicates situations that could pose a risk to personal safety or health.

Warning: Situations which pose no risk to personal safety or health, but could pose a risk to the correct functioning of the device.

Tip: Additional information to help you get the best out of your device.

Trademarks

The bq logo is a registered trademark of Mundo Reader, S.L.

Intel® is a logo and registered trademark of the Intel Corporation.

Microsoft Windows is the name of one of the proprietary operating systems of the Microsoft Corporation.

Microsoft Office is a proprietary office suite of the Microsoft Corporation.

Wi-Fi® is a registered trademark of the Wi-Fi Alliance.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

MicroSD™ and the corresponding logo are registered trademarks of SD-3D, LLC.

HDMI® (High-Definition Multimedia Interface) is a registered trademark of HDMI Licensing, LLC, subsidiary of Silicon Image, Inc.

All other trademarks are the property of their respective owners. All rights reserved.

Contents

6 BEFORE YOU START
6 Box Contents
7 Product Overview

8 GETTING STARTED
8 Inserting/Removing the MicroSD Card
9 Switching the Device On and Off
10 Charging the Device
11 Transferring Files
13 Setup Wizard

14 DESKTOP
14 Lock Screen
15 Start Screen
17 Extending the Start Screen
20 Charms Bar
22 Icon Guide
22 Keyboard
23 Apps Menu

28 CONTROL PANEL
29 System and Security
29 Networks and Internet
29 Hardware and Sound
29 Programs
29 User Accounts and Family Safety

29 Appearance and Personalisation
30 Clock, Language and Region
30 Ease of Access

31 EMAIL
31 Microsoft Account
34 Setting up Other Email Accounts
35 Sending an Email
35 Replying to an Email

36 PERFORMANCE SETTINGS
36 Optimising the Battery Life

37 MULTIMEDIA
37 Camera
38 Playing Music
38 Playing Videos

39 APPLICATIONS
39 App Store
39 Preinstalled applications
39 Web Browser
40 Text Editor, Spreadsheets and Presentations
40 Calendar
41 Maps and GPS Navigation
41 Live Tiles

42 TOOLS
42 Calculator
42 Alarms
43 Sound Recorder

44 APPENDICES
44 APPENDIX A: Technical Specifications
45 APPENDIX B: Cleaning and Safety
48 APPENDIX C: Information on Exposure to Radio Waves and SAR
49 APPENDIX D: Disposing of this Product Correctly
50 APPENDIX E: Declaration of Conformity

BEFORE YOU START

Box Contents

Before using your bq device for the first time, please check the contents of the box. If any of the following items are missing, contact the retailer that sold you the device.

- ✓ Tesla 2 W8
- ✓ Charger
- ✓ Documentation:

  Quick Start Guide
  Warranty and Safety Manual
  bq Accessories

Product Overview

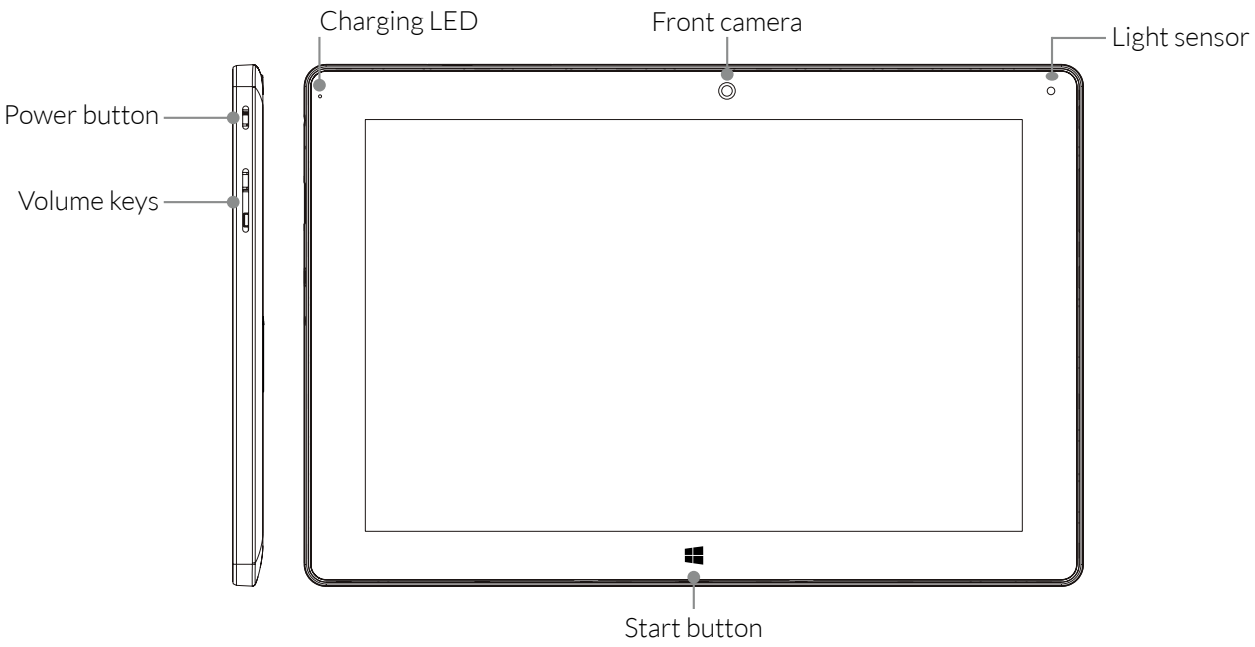

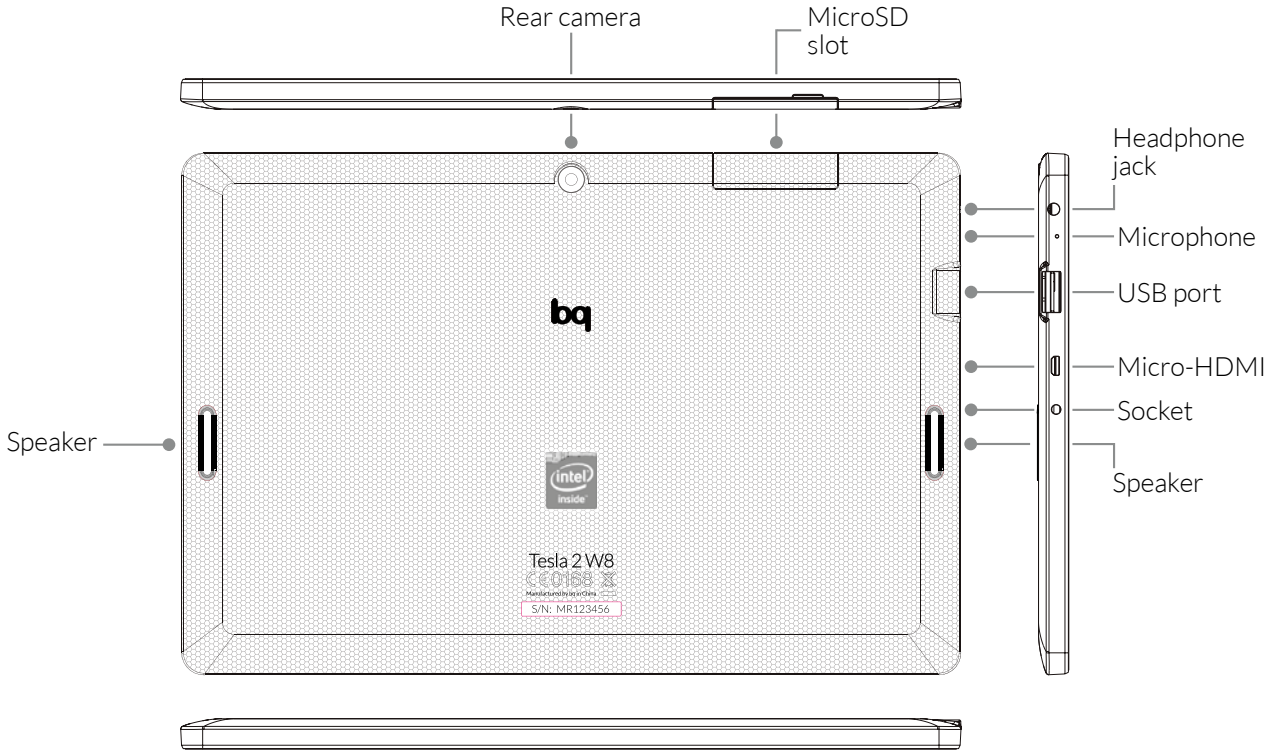

Do not attempt to remove the rear cover of your bq Tesla 2 W8, as this may damage the device.

Do not remove the battery by any means. Removing it may invalidate the warranty.

Do not insert any pointed objects into the opening as this may damage the microphone.

GETTING STARTED

Inserting/Removing the MicroSD Card

Your bq Tesla 2 W8 has an internal memory that can be expanded to 32 GB by using a MicroSD card.

To insert a MicroSD card, follow these steps:

Insert the MicroSD card into the slot, making sure that the metal pins are at the bottom and facing towards the screen, as shown in the diagram:

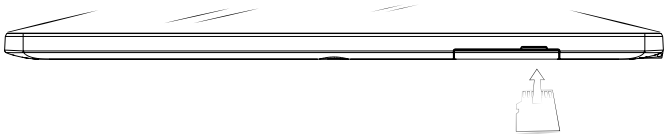

Push the card in until you hear a slight click, which indicates that it has been inserted correctly. If the card is not inserted correctly, the device may not recognise it and its content will not be available.

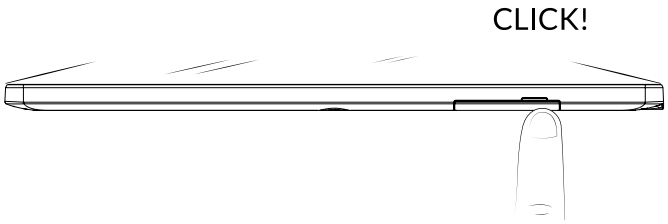

To remove the MicroSD card, follow the steps above in reverse, bearing in mind the following recommendations:

a) For safety purposes, switch the device off before removing the MicroSD card.

b) If you need to remove the MicroSD card while the device is switched on, first unmount it in order to avoid damaging the card and losing any data.

   To unmount the card, press the triangle icon on the bottom right of the desktop taskbar. Select the USB connector icon in the box that appears. When you see a message stating that it is now safe to unmount the MicroSD card, you can remove it.

To unmount the card, push it in until you hear a slight click to indicate that the card has been released.

You can choose whether to store your multimedia files on the tablet's internal memory or directly onto the MicroSD card. Remember that any content stored on the MicroSD card will not be available when the card is removed, and any apps stored on there will no longer function.

Switching the Device On and Off

To switch on your bq Tesla 2 W8, press and hold down briefly the On/ Off button located on the side of the tablet.

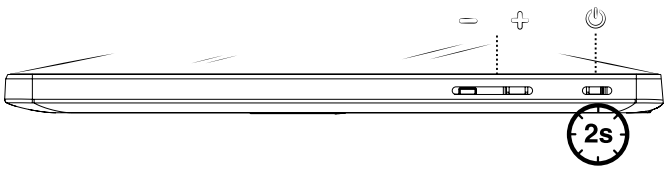

To switch off the device, press and hold down the On/Off button until a divided screen and a message instructing you to **Slide to shut down your PC ▼**.

If you press briefly on the On/Off button, the screen will switch off but not the device.

Charging the Device

Your tablet has a rechargeable (non-removable) 7000 mAh battery which is charged via the AC/DC connector located on the left side of the device. A mains adapter is provided with the tablet for charging the battery. To charge it using the adapter, follow these simple steps:

1. Connect the 2.5 mm jack of the mains adapter to the tablet.
2. Connect the mains adapter to any standard plug socket (220V/50Hz).

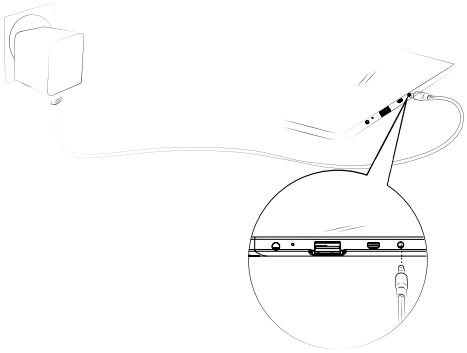

The battery in your bq Tesla 2 W8 is non-removable. If it is removed by anyone other than our Technical Support staff, your device could be damaged and the warranty invalidated.

Allowing the battery to charge fully is recommended when you charge it for the first time, as this will help calibrate the battery metre. Bear in mind that some batteries perform better after a number of full charge/discharge cycles.

Transferring Files

You can transfer files to your tablet using a USB/HDD memory, a MicroSD card or wirelessly via Bluetooth.

In either case, simply connect the devices to the tablet and it will detect them automatically. You have several options for browsing through the content:

a) Touch the **DISK D:** message that appears on connecting the external storage device and then select the **Open folder option to view the files.** This will give you direct access to the contents of the removable memory.

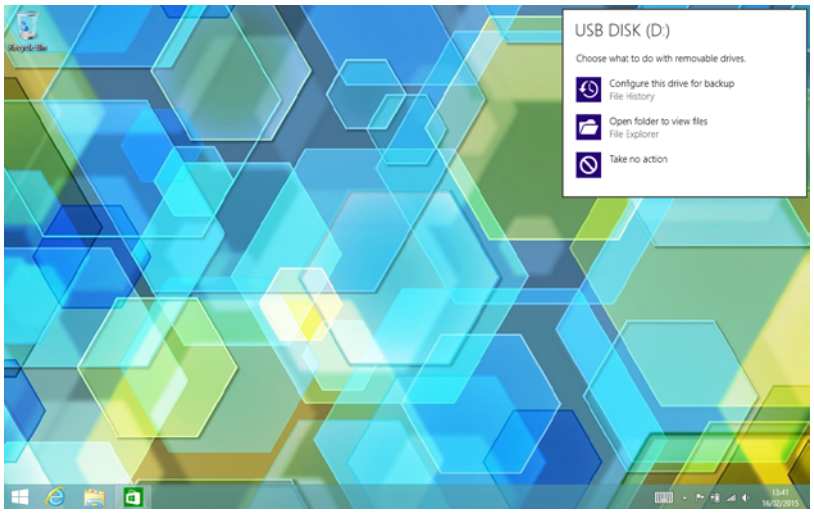

b) Press on the PC monitor icon on the Windows 8 desktop to open **This PC**, where you can access all internal/external storage units.

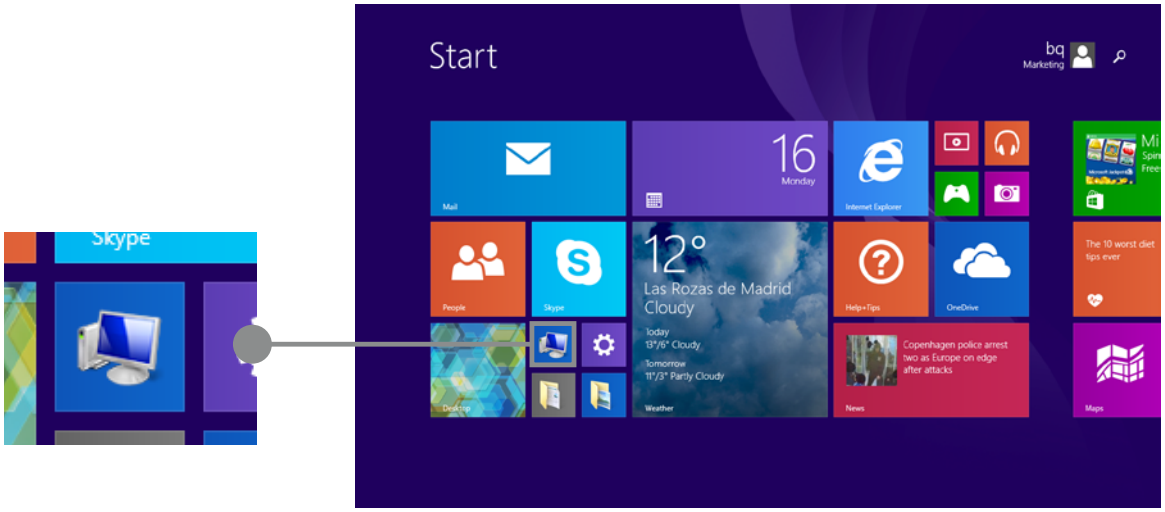

From the removable directory of folders and files on the device, you can copy/cut and paste them to a file path of the Tesla 2 W8's internal memory. This ensures that they will always be available when the removable memory is not connected. You can also move or copy files from the internal memory of the tablet to an external device.

To send/receive files via Bluetooth, you can access the Bluetooth data transfer menu by pressing on the arrow in between the keyboard icon and the notification flag in the task bar of the Windows **Desktop**.

Remember that all files in external devices or removable memories, will no longer be available once they have been disconnected from your Tesla 2 W8.

Do not disconnect the device or external memory while files are being transferred as they could be damaged.

Setup Wizard

The first time you switch on your bq Tesla 2 W8, a setup wizard will help you to configure the basic settings for your device:

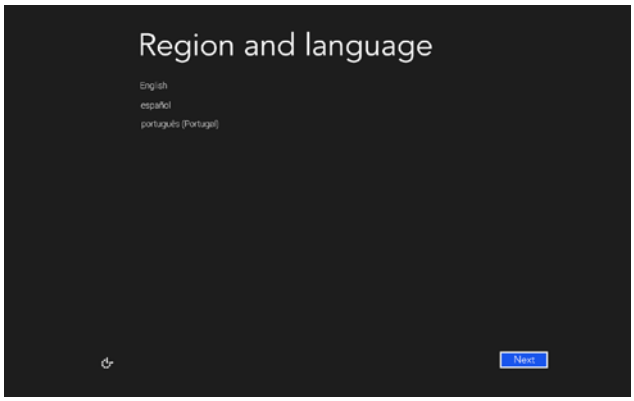

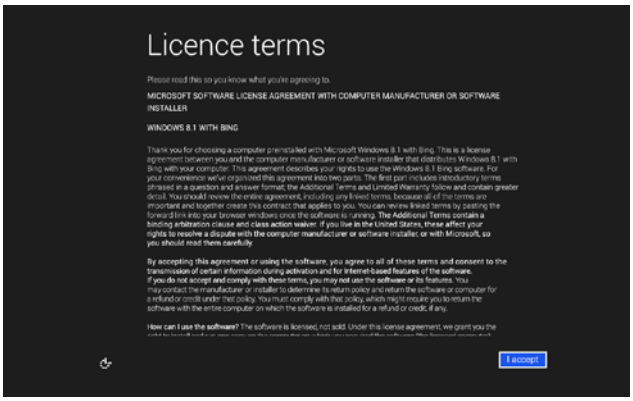
Licence terms
MICROSOFT SOFTWARE LICENSE AGREEMENT WITH COMPUTER MANUFACTURER OR SOFTWARE INSTALLER
WINDOWS 8.1 WITH BING
I accept

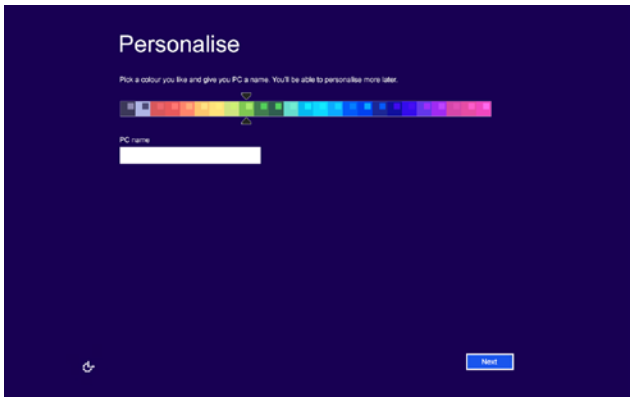

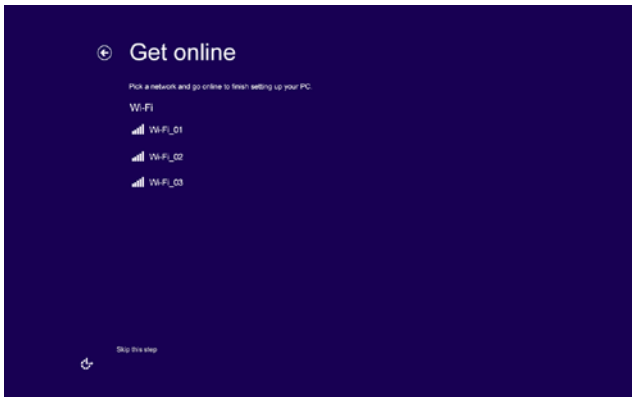

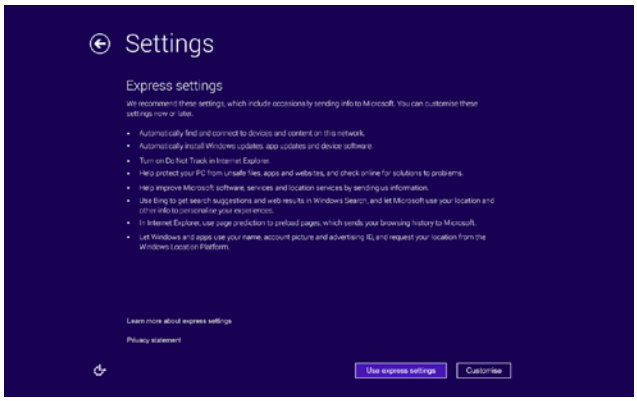

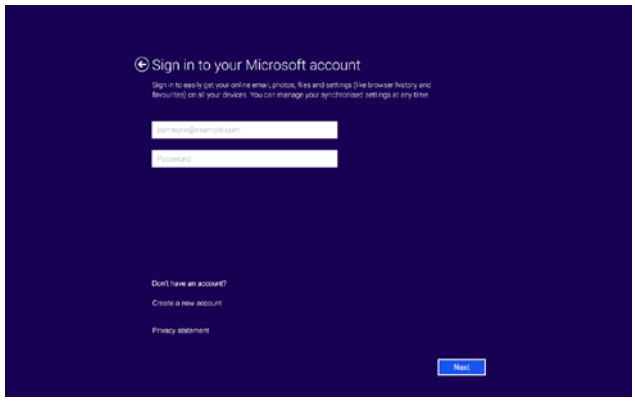

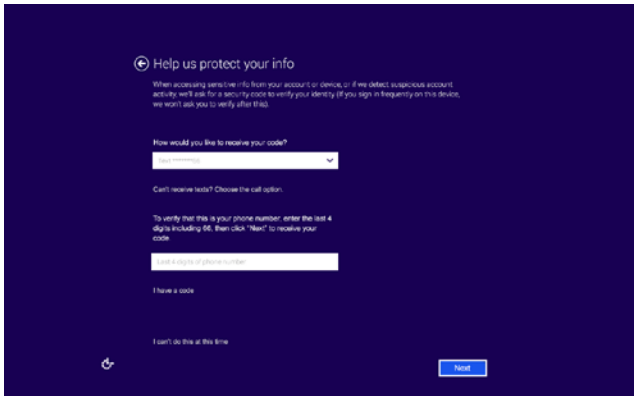

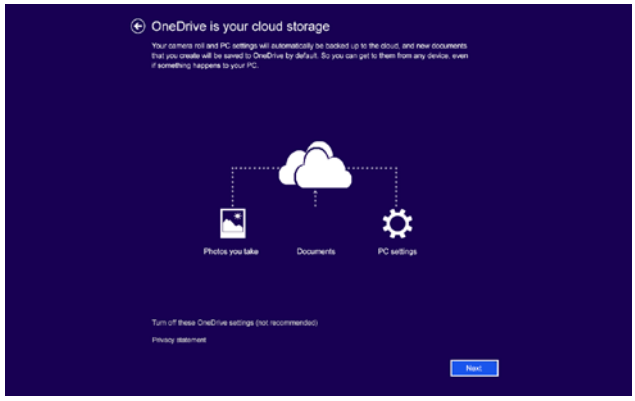

DESKTOP

Lock Screen

Your tablet screen will lock itself after a prolonged period of inactivity. To configure the screen timeout interval, press the Menu button ⚙, followed by ***Lock screen***. To turn off the screen and lock the device manually, briefly press the power button.

To unlock it, briefly press the power button again and the screen turn on, and the unlock option you have set up will appear.

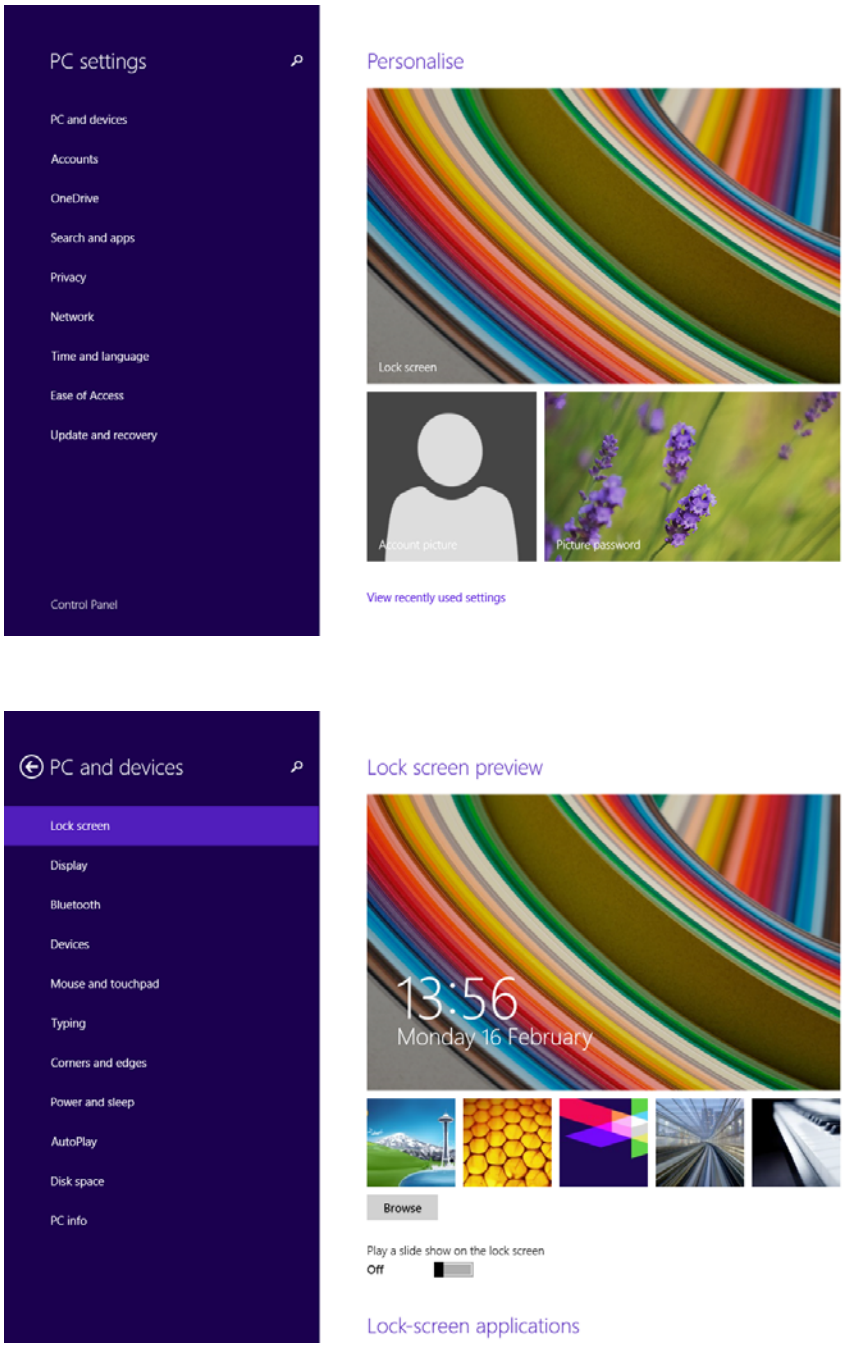

Start Screen

On switching on your tablet the **Start screen** will appear, where you can view emails, apps notifications, updates from your friends and the next event in your calendar, without needing to open a single app. You can start a session with different Microsoft accounts, which allows the icons, colours and backgrounds to be personalised.

If you are using an app or doing something else on your tablet, there are various ways to return to **Start**:

a) Press the **Start** button on the tablet.

b) Swipe your finger from the right and press the **Start** icon on the Charms bar.

c) Swipe your finger from the top of the screen to the centre and press **Start**.

Lock Screen

To adjust the screen lock time interval, go to Desktop and swipe your finger from the right to pull out the Charms bar. Press on ***Settings > Control Panel > Power Options***. If this option does not appear, go to View by and change from Category to another option to view a longer list. You can choose or customise an existing power plan, and you can also **Create a power plan** yourself.

If you want to lock and turn off the screen, briefly press the power button.

Adjusting the screen rotation

In some applications, the screen automatically rotates from portrait (vertical) to landscape (horizontal) and vice versa, according to the position that your device is placed in. To lock the screen rotation, swipe your finger from the right of the screen, go to ***Settings > Screen*** and press the screen icon, and a padlock will appear.

Customising the Start screen

You can customise the Start screen by using your own background images. You can organise it by adjusting the size of the tiles and arranging them as you like to make it easier access the apps, folders, sites and contacts that you use the most.

Pinning tiles to the Start screen

1. Go to Start and press and hold the tile you want to move.
2. Drag it to the desired location and release.

Change the size of a tile on the Start screen

1. Press and hold down the tile you want to adjust. A menu will appear at the bottom of the screen.
2. Select the Resize icon from the menu and then select the option you want.

The tiles that you use most could be larger and those that you use the least could be smaller.

You can adjust the size and arrange the tiles however you like.

You can also group several icons together to make it easier to keep track of the apps and use them more effectively.

Taking screenshots

You can take screenshots easily by pressing the volume key and the Start button simultaneously. They will saved automatically in ***Desktop > Pictures > Screenshots***.

Learning to Use the Multi-Touch Screen

Your tablet has a capacitive multi-touch screen with various simultaneous detection points. Different movements can be made over these points which are linked to different functions:

Touch. Touch the screen briefly to select an icon, open an app, activate a text-entry box, etc.

Touch and hold. Touch the screen (either a clear area or an icon) with your finger and hold for approximately 2 seconds to bring up the menu of available options.

Drag. To move an icon, press and hold down, drag it to the desired position and then release.

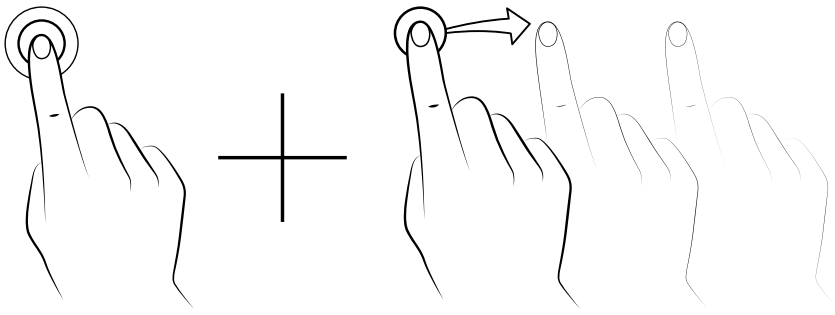

Swipe or slide. Press briefly on the **Start screen**, slide your finger left or right to access the extended screens, or slide your finger up and down to scroll through webpages, app lists and menus.

Pinch. Place two fingers on the screen at the same time and move them towards one another or spread them apart to reduce or enlarge an image. You can also double-tap the screen quickly to zoom in on or out of an image, when viewing photos or browsing a website.

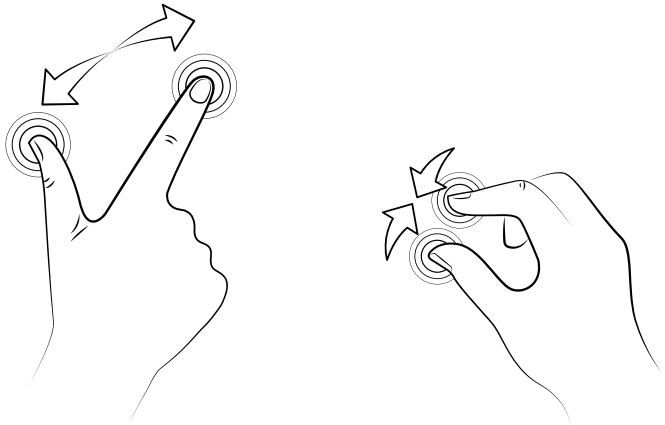

Double-tap. Tap the screen twice in quick succession to increase the zoom. Repeat the action to zoom out again. You can also use it to activate the screen.

Common functions with touch screens

Go to the last app. Swipe from the left of the screen.

See a list of recent apps. Swipe your finger quickly from the left of the screen and back again, without releasing it.

Close an app. Drag the app up to the top of the screen and then down to the bottom.

Select an element. Swipe your finger over the element or press and hold down to select it.

Charms Bar

To view the Charms bar, swipe from the right of the screen. These five features will help you with the most common actions: **Search**, **Share**, **Start**, **Devices** and **Settings**.

You can search the internet or your tablet, print documents and send photos and links via email.

Search

The **Search** feature enables you to search your tablet, the web, some apps and the Windows Store. Via a simple search, you will get all the results and you can go back to them later without having to search again.

1. Pull out the Charms bar and press **Search**.
2. Enter the search time. A list with search results and suggestions will appear as you write.
3. If you are searching for an app, file or option found on the results page, press or click to open it.

Share

You can share files, photos and information with people easily or save it for later, without having to leave the app you are using.

You can share your files via most apps, email or **OneDrive**.

1. Press and gently drag the element downwards to select it. If you want to deselect the element, press briefly drag it downwards again.
2. Pull out the Charms bar and then press **Share**.
3. Press or click on app you want to share via and follow the instructions that appear on screen.

Start

As well as pressing the **Start button** you can also access Start via the Charms bar. Or alternatively, if you are already in Start, you can use this feature to return to the previous app.

Devices

Via the **Devices** option, you can quickly send files and information to other devices connected to your tablet, such as the printer, the Xbox, phone, speakers, television or projector. The list of devices available under **Devices** depends on which ones are connected to the tablet.

1. Open an app and swipe quickly over the element or file you want to send to a device in order to select it.
2. Pull out the Charms bar and then press **Devices**.

Configuration

From **Settings** you can configure some common options quickly:

1. Pull out the Charms bar and then press **Settings**.
2. Press or click on the option you want to change.

To change your PC settings

You can change most of your PC settings (rather than via the Control Panel), such as personalisation and other things, such as devices, accounts, OneDrive, network and language.

1. Pull out the Charms bar, press ***Settings > Change PC settings***.
2. Touch the option you want to change: **Notifications**, **Search**, **Share**, **General Use**, **Privacy**, **Devices**, **Networks**, etc.

Information Icons

They are shown on the Lock Screen and Start. Some of the main icons are:

- Battery empty
- Battery charging
- Battery fully loaded
- Wi-Fi on and connected to a network
- Wi-Fi on and not connected to a network
- Flight mode enabled
- Enable the keyboard for writing

Keyboard

On pressing on any text field, the virtual keyboard will appear.

1. Enable/disable capital letters.
2. Change from letters to numbers and symbols, or vice versa.
3. Combine this key with another to use a quick function.
4. Space.
5. Select the keyboard display mode.
6. Enter/line break.
7. Delete.

You can set up text entry via ***Settings > Control Panel > Keyboard.***

Apps Menu

In the **Applications** view, you will find all your apps, including desktop programs such as Word and Excel.

To access it, go to **Start** and swipe quickly from bottom to top. Swipe right to left to browse the menu and see all the applications.

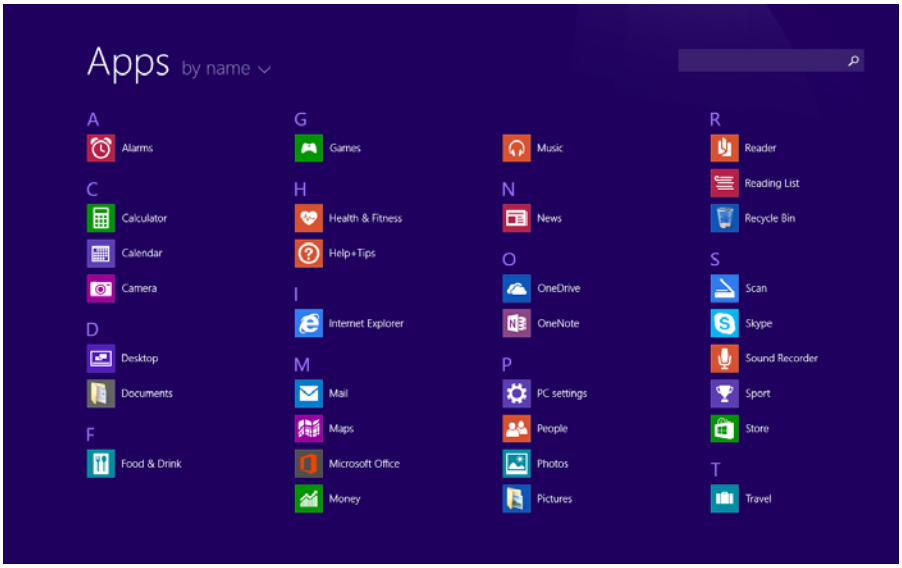

It locates and installs apps for your tablet

The apps make using your PC easier by offering new ways to work and have fun. If you want to find apps to install on your tablet, touch **Store** on the **Start screen**. You must be connected to the internet and logged in with a Microsoft account.

Within **Windows Store**, you can explore the apps and lists shown. If you don't know what type of app you want, you can start with the apps that appear in the **Store**. Go right to browse lists of the most popular apps, according to categories such as new, paid or free. To view of all the apps of a particular list, simply press on the name.

After you have installed an app from the **Store**, it will appear under **Applications** with the rest of the applications installed on your tablet.

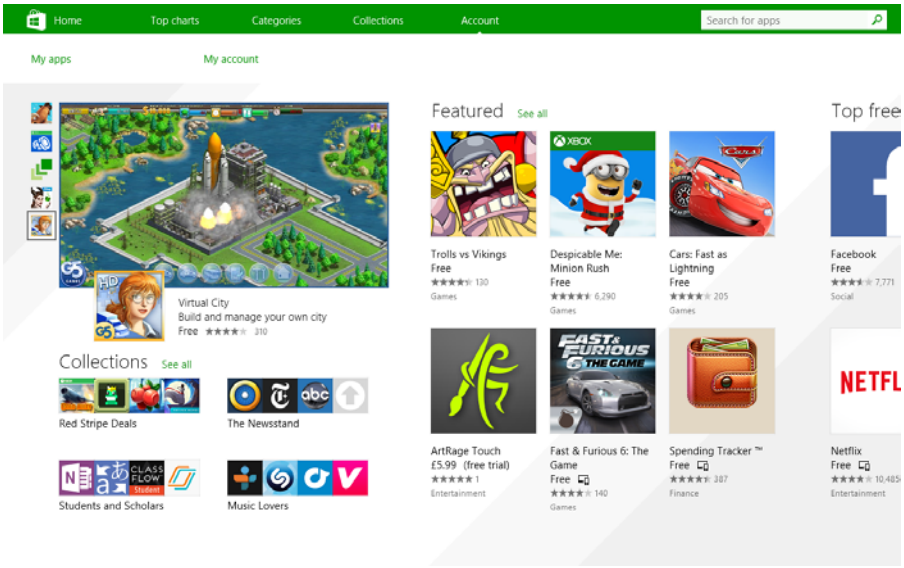

Pinning apps

To pin an app to the **Start screen**, hold down and drag it gently until a bar appears at the bottom of the screen with the **Pin to Start** option. The pinned apps will appear at the bottom of **Start screen**.

You can rearrange the pinned apps, resize tiles, and group related apps together.

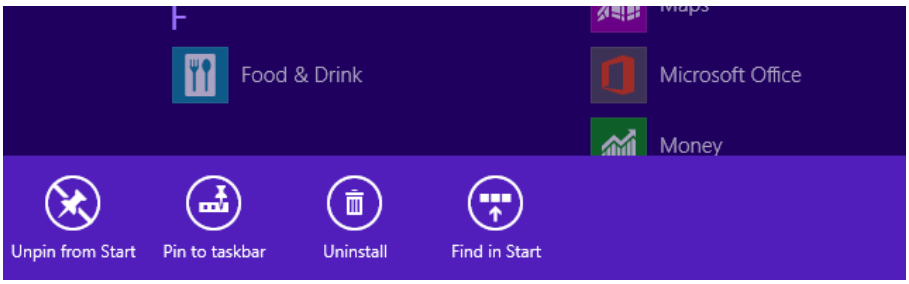

Unpinning apps

If you want to remove an icon from the **Start screen**, you will need to unpin it.

Unpinning an app does not uninstall it, as it will still appear under **Applications**.

To unpin an app from Start:

1. From the **Start screen**, press and hold the tile until an options bar appears at the bottom and press **Unpin from Start**.

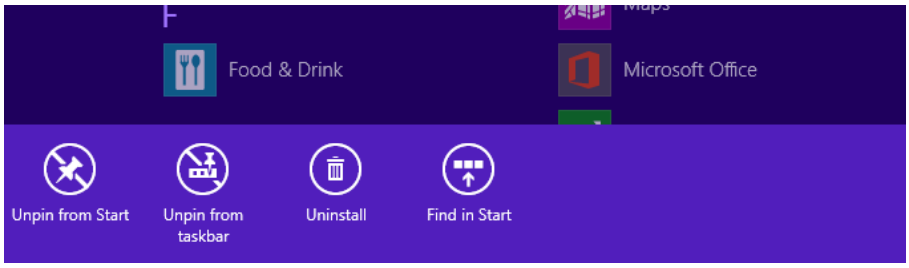

   You can also select multiple tiles and unpin them all simultaneously. To delete the selected tiles from the **Start screen** or under **Applications**, press or click on an open area of the screen or on **Customise**.

2. Press on **Unpin from Start**.

Using your apps

To start using an app, click on it on the **Start screen** (if pinned) or under **Applications**. The tasks that can be carried out with an app depend on the app installed, however, here are some basic suggestions for you:

See the app commands

App commands help you to carry out different tasks in apps. To see the commands available in an app, swipe down from the top of the screen or swipe up from the bottom, and then select the command.

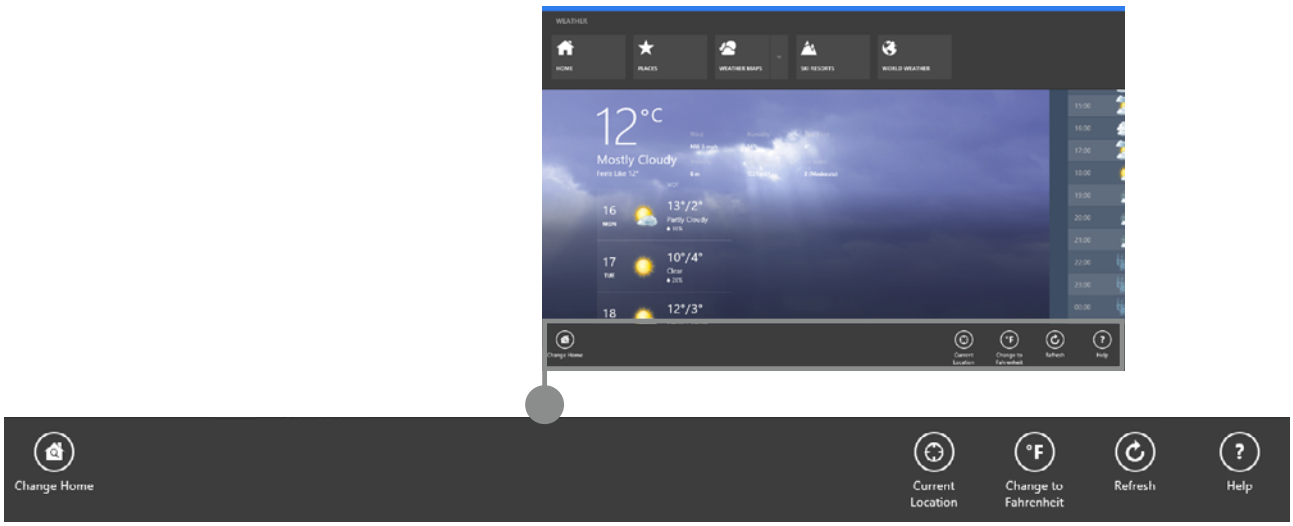

Using charms in an app

In many apps you can use the Charms bar to **Search**, **Share**, **send files** to printers or other **Devices** and change the **Settings**. To use the charms in one app, swipe your finger from the right to pull out the Charms bar then select a charm.

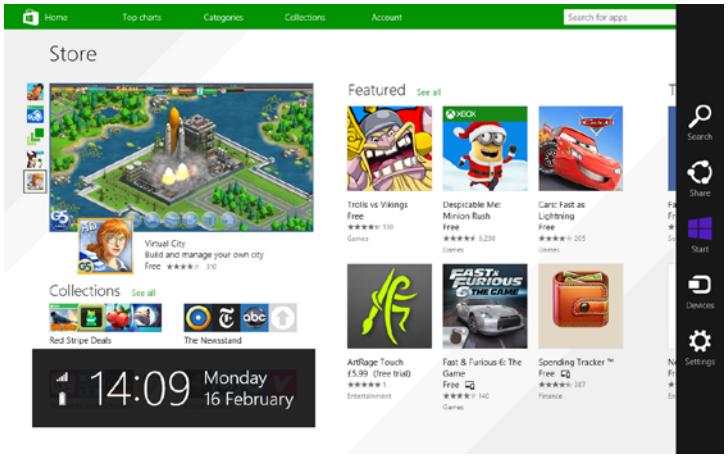

Closing an app

The app in the **Windows Store** has been designed so that they don't affect the speed of your tablet. When you finish using an app, Windows leaves it running in the background and it will eventually close itself if you don't use it.

However, if you want to close an app and make it disappear, drag it to the bottom of the screen.

To view or return to applications that were being used and have not been closed, swipe your finger gently to the centre and, without releasing, pull this screen to the left. All the recently-visited applications will appear.

If you want to close an app and make it disappear, drag it to the bottom of the screen and it will be removed.

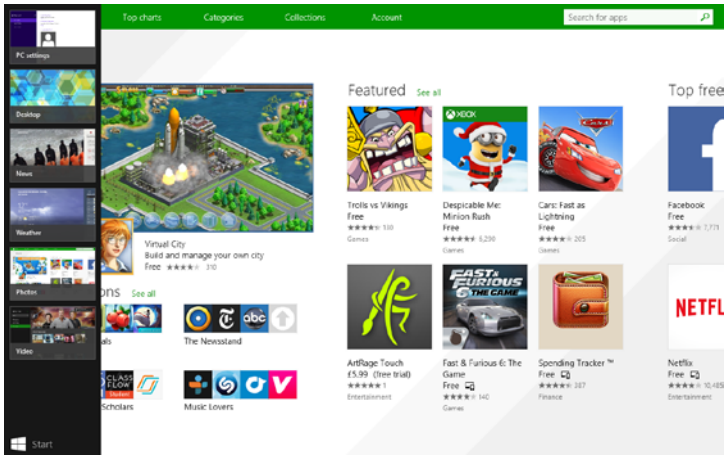

Installing your apps on other devices

All your Windows 8 and Windows 8.1 apps will appear under **My apps** in the Windows Store. You can see which apps have been installed on the different devices that you use and you can install apps from here directly, to avoid having to find them in the Store and to install them on each one.

1. On the Start screen, press the **Windows Store** icon.
2. Go to the **Account** menu and then to **My apps**.
3. Swipe your finger down on the apps you want to install and then hit **Install**.

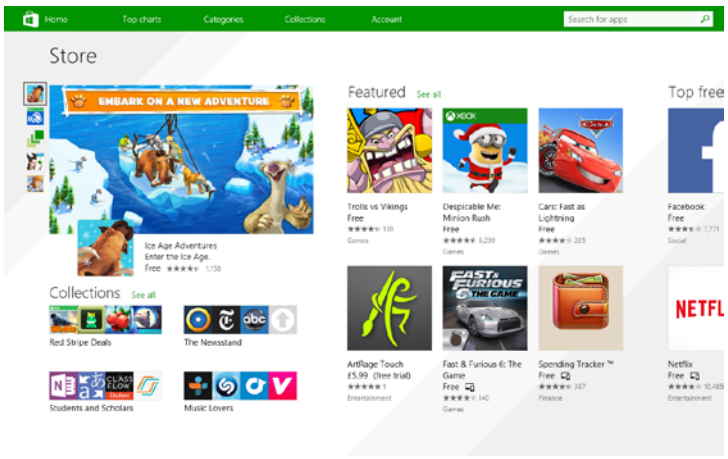

You can install Windows 8 apps on a device with Windows 8.1 but not the other way round.

CONTROL PANEL

The Control Panel provides access to all the tools for configuring your tablet. You can personalise the system, adjust the security settings, manage the apps and the hardware or adjust the network settings.

To access it, slide your finger from the right to pull out the Charms bar the press ***Settings > Control Panel***.

You can view by **Category**, **Large icons** or **Small icons**.

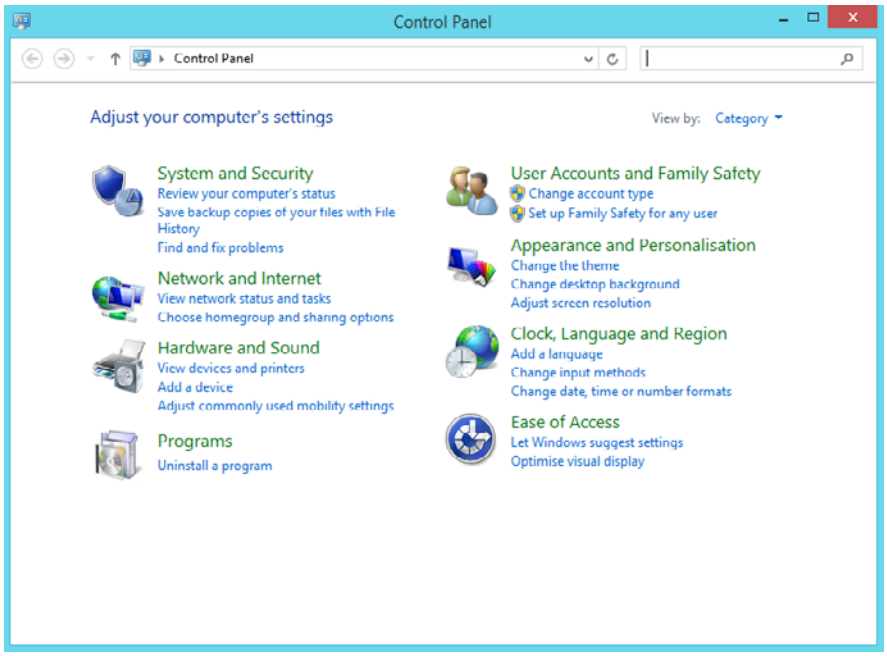

View by Category

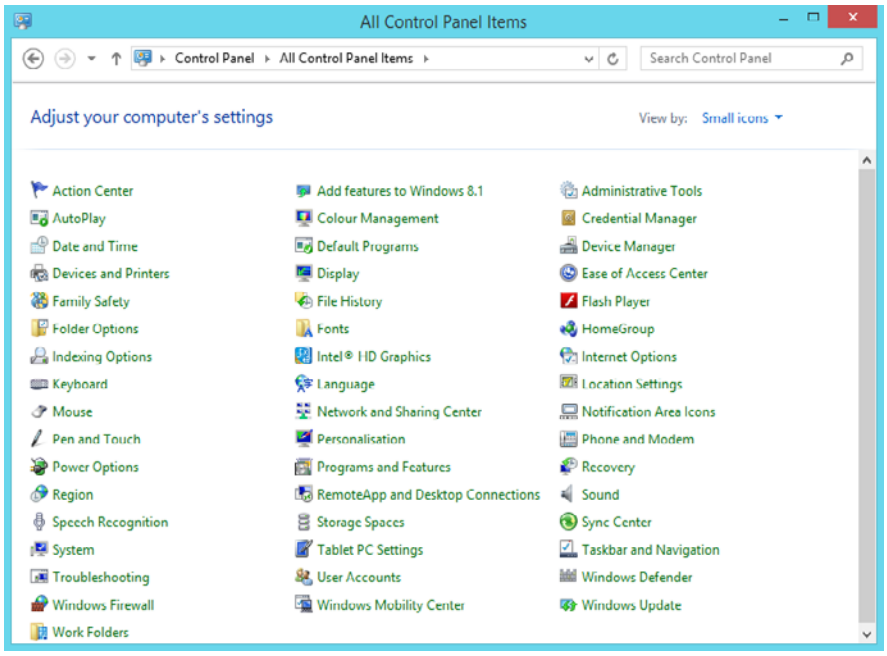

View by Small icons

System and Security

Here you can review the status of your device's system security, manage the connected devices and how they operate, as well as the Power Options and Storage Spaces, etc.

Network and Internet

From this section, you can see the status of your networks, add/connect to new networks, determine the configurations and manage your device's internet options.

Hardware and Sound

Adding new devices such as printers, mouses, keyboards can be done via this menu. You can also adjust the audio volume and settings, personalise the display (resolution, backgrounds, remote screens, etc.) and configure other accessories.

Programs

From this section you can uninstall programs and control the advanced settings. The application update settings are also available here.

User Accounts and Family Safety

From here, you can manage the different user accounts that can access your device, and you can also enable and configure Family Safety. You can also access the Credential Manager via this menu to manage web logins and passwords.

Appearance and Personalisation

This menu enables you to control the themes and colours, backgrounds, notification sounds, navigation, accessibility or the font type and size of the text display in different windows.

Clock, Language and Region

Here you can adjust settings such as the date and time, the time zone and the region.

Add a language

This option allows you to select the language for your Tesla 2 W8. You can have various different languages installed on different user accounts.

Change input methods

Here you can control the input method of the keyboard and the language preferences, including punctuation and the date and time formats.

Changing the date, time or number formats

Here you can set the time of the Windows clock and indicate the correct date. If you sync the PC clock with the internet you will always have the exact time.

You can also define two **clocks** with different time. Another option is to add a desktop clock gadget that shows the time in your chosen location.

Ease of Access

This menu has two options aimed at improving accessibility for people with some type of disability:

Let Windows suggest settings

We can allow Windows to select the most suitable configuration for each type of disability.

Optimise the visual display

Allows different accessibility options to be controlled, including voice recognition.

The **Control Panel** includes a wide variety of tools to make using Windows easier for people with disabilities or anyone with problems in using it with the default settings.

EMAIL

Microsoft Account

Account

To obtain apps from the **Windows Store**, to make backups using the free cloud storage facility, to update and sync your favourite apps and multimedia files (devices, photos, friends, games, settings, music, etc.), you will need to have a Microsoft account to log on to your tablet.

It is free of charge, easy to set up and you can use an existing Microsoft email account or to create a new one in just a few steps.

If several people are using the same Tesla 2 W8, each of them must have their own account. Each account can personalise the device with their preferred background colours, favourite apps, account picture, inbox, etc.

If you have children, you can also make a child account with extra security measures and supervision (with or without email) so that your children only see what you want.

If you have used Microsoft services before (Xbox, Hotmail, Outlook, SkyDrive, Messenger, Skype or Windows Phone), you will already have a Microsoft account (the email address you used to log in). If you can't remember which email address you used, you can easily create a new one totally free of charge.

To check if you are signed in with a Microsoft account:

1. Pull out the **Charms bar**, press ***Settings > Change PC settings***.
2. Hit click **Accounts** then **Your account**.

If you are already signed in with a Microsoft account, you will see your name and email address displayed with the account picture.

If you have signed in with a local account, **Local account** will appear beneath your username.

Signing in

If you have logged on to the tablet with a local account, there are various ways to change to a Microsoft account. Pull out the **Charms Bar**, hit ***Settings > Change PC settings > Accounts > Your account > Change to a Microsoft account***. Confirm the current password if necessary. Then select one of the following options:

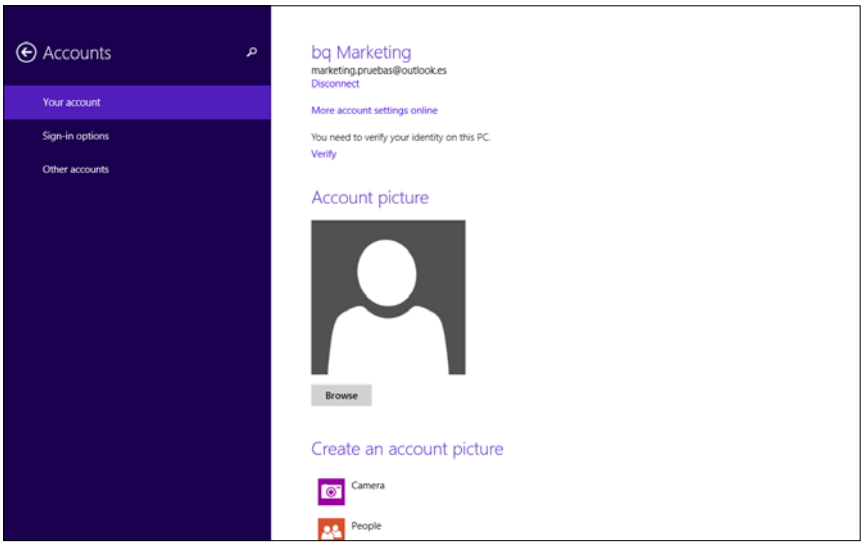

a) **Signing in with a Microsoft account.** Even if you are not logged on to your tablet with a Microsoft account, if you have already used other Microsoft services such as Hotmail, Outlook Skype or Xbox, you will most likely have one.

   Enter the email and password that you use for these services, hit ***Next*** and then follow the instructions.

b) **Signing up for an email address.** Follow the instructions for filling in the personal and security information to create a new Microsoft account.

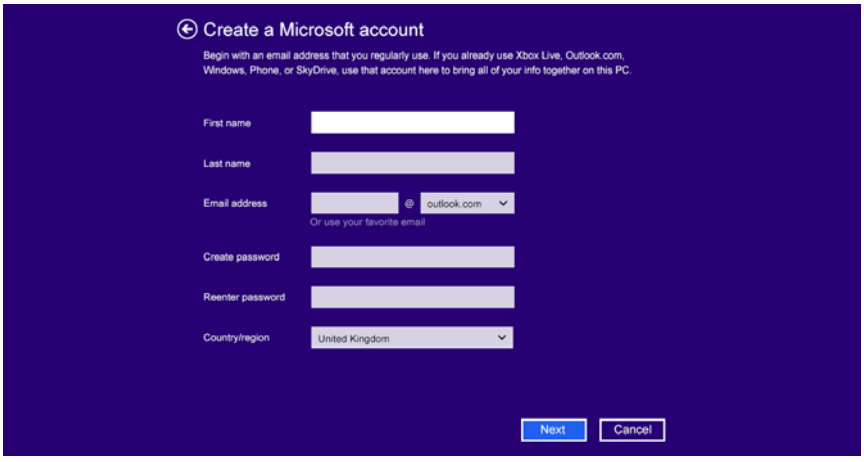
Create a Microsoft account
Begin with an email address that you regularly use. If you already use Xbox Live, Outlook.com, Windows Phone, or SkyDrive, use that account here to bring all of your info together on this PC.
First name
Last name
Email address
@
outlook.com
Or use your favorite email
Create password
Reenter password
Country/region
United Kingdom
Next
Cancel

Access

Your Microsoft account is the key that provides access to the free online storage, mobile entertainment, apps from the **Windows Store** and other Microsoft products and services (such as Xbox Live or Windows Phone), and it allows you to easily connect to your devices and accounts.

Obtaining apps from the Windows Store

You will need a Microsoft account and Windows 8.1, Windows RT 8.1, Windows 8 or Windows RT to obtain apps from the **Windows Store**. You also can install your apps on several devices without needing to buy them again.

Syncing your contacts

Link your Facebook, Twitter, Outlook and LinkedIn accounts to the **People** application to see the contact information and updates of your friends in one place.

Sync your configuration

Enjoy the same themes and colours, the **Start** design, your browser favourites and history, the content of your apps, your photos and even the configuration, such as language and other preferences, across several devices. All you have to do is sign in with a Microsoft account and sync the configuration.

Get free storage in the cloud

If you have a Microsoft account, you can take full advantage of the free cloud storage facility through OneDrive, which enables you to view, save and share your documents and photos. The Microsoft account links your PC to OneDrive, so that you will always have your files to hand.

Setting up Other Email Accounts

To be able to send and receive emails from any account, you can use the **Mail** application on the **Start screen**, under **Apps**.

The first time you use this app, you will be asked if you want to add another account:

1. Select an email provider: **Outlook.com**, **Exchange**, **Google**, **Yahoo!** and **Other account**.
2. Enter the email address and password and sign in.
3. Read the data to be shared and accept. You can share this account with other applications without having to re-enter the data.
4. Once the configuration is finished, synchronisation could take a few minutes to bring up all the emails on screen.

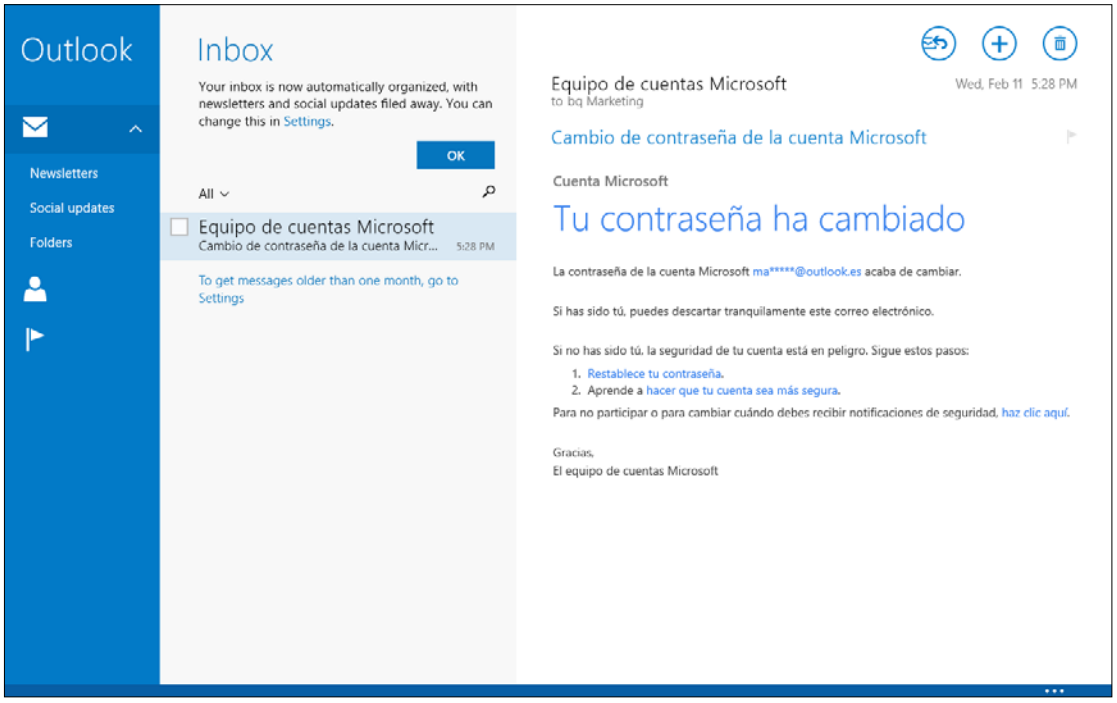
Outlook
Inbox
Your inbox is now automatically organized, with newsletters and social updates filed away. You can change this in Settings.
OK
Newsletters
Social updates
Folders
All
Equipo de cuentas Microsoft
Cambio de contraseña de la cuenta Micr... 5:28 PM
To get messages older than one month, go to Settings
Equipo de cuentas Microsoft
to bq Marketing
Wed, Feb 11 5:28 PM
Cambio de contraseña de la cuenta Microsoft
Cuenta Microsoft
Tu contraseña ha cambiado
La contraseña de la cuenta Microsoft ma*****@outlook.es acaba de cambiar.
Si has sido tú, puedes descartar tranquilamente este correo electrónico.
Si no has sido tú, la seguridad de tu cuenta está en peligro. Sigue estos pasos:
1. Restablece tu contraseña.
2. Aprende a hacer que tu cuenta sea más segura.
Para no participar o para cambiar cuándo debes recibir notificaciones de seguridad, haz clic aquí.
Gracias,
El equipo de cuentas Microsoft

Sending an Email

1. Open the **Mail** application and press the **Compose** ⊕ button.
2. Enter the recipient's email address, the subject and body of the message.
3. Hit the **Send** button.

To attach files hit the button and select the file you want to send.

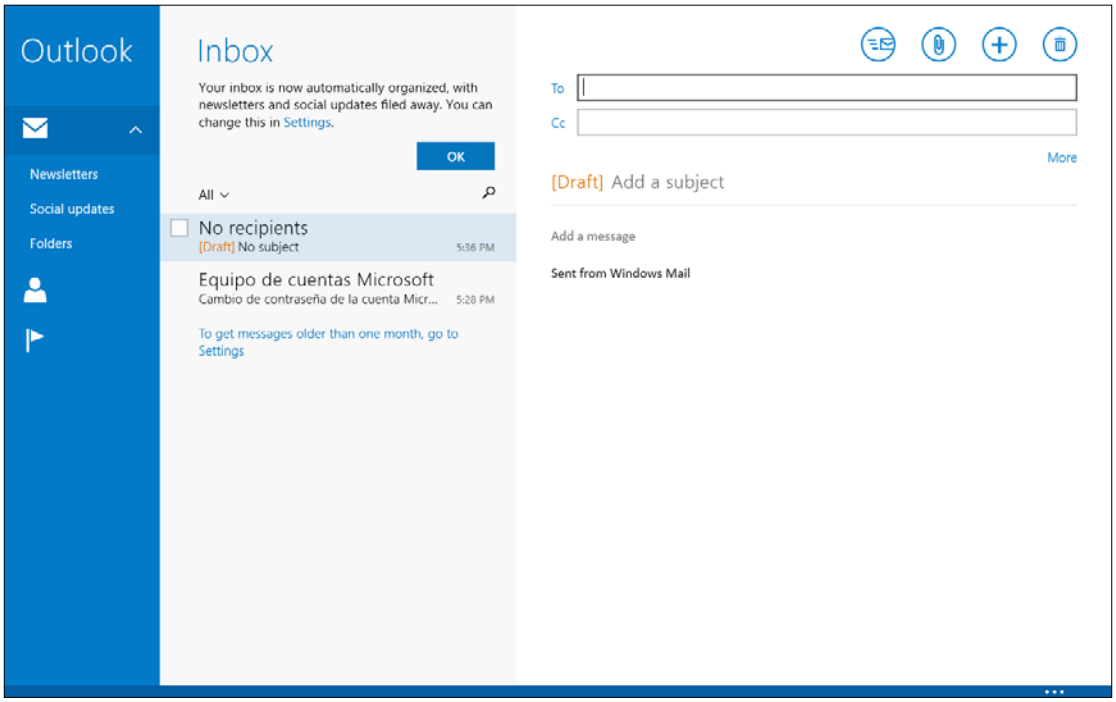

Replying to an Email

There are three ways of replying to emails which are open:

- **Reply:** only the person that sent the last message will receive your reply.
- **Reply all:** all the users listed as recipients of the last email will receive a copy of the answer.
- **Forward:** you can send forward the contents of an email to a different user.

The forward option on some email clients only allows the attached files of the previous email to be sent.

PERFORMANCE SETTINGS

Optimising the Battery Life

You can prolong the battery duration by disabling features that you don't need. You can also can control how the application and system resources consume the battery power. To optimise the configuration, pull out the Charms bar and go to ***Settings > Control Panel*** to access the PC settings.

- If you are not using Wi-Fi, Bluetooth or GPS, you can configure it under **Settings**, as explained earlier.
- Adjust the brightness of your screen according to the current ambient light conditions.
- Set a time delay before the screen goes off under ***Settings > Control Panel > Power Options***.
- Switch to **Flight mode** by holding down the power button until a window displaying this option appears, or go to **Settings** then **Network** to select it.

MULTIMEDIA

Camera

The front camera allows you to take photos and video simply by touching the screen, and selecting the camera or video icon, as desired.

To take a photo, press the icon of the photo camera. To record a video, press the video icon lightly when you want are ready to start or stop recording. Slide your finger from top to bottom to icons to see the camera roll, to switch from front camera to rear, to set the timer or adjust the exposure.

Playing Music

Your tablet comes with the **Xbox Music** player as standard. Add music to your library from the Windows desktop. Select **Explore** to browse and buy. Pressing **Radio** also enables you to listen to your favourite radio stations.

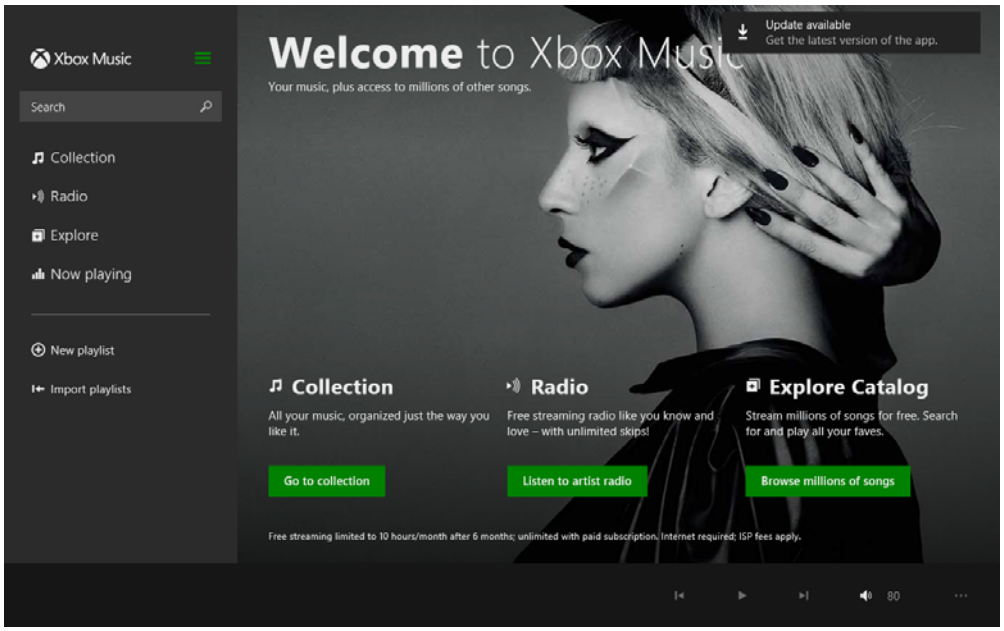
Xbox Music
Search
Collection
Radio
Explore
Now playing
New playlist
Import playlists
Welcome to Xbox Music
Your music, plus access to millions of other songs.
Update available
Get the latest version of the app.
Collection
All your music, organized just the way you like it.
Go to collection
Radio
Free streaming radio like you know and love – with unlimited skips!
Listen to artist radio
Explore Catalog
Stream millions of songs for free. Search for and play all your faves.
Browse millions of songs
Free streaming limited to 10 hours/month after 6 months; unlimited with paid subscription. Internet required; ISP fees apply.

Playing Videos

Your tablet comes with the **Xbox Video** player as standard. This application allows you to play all the videos stored on your device, and it also provides film and TV stores.

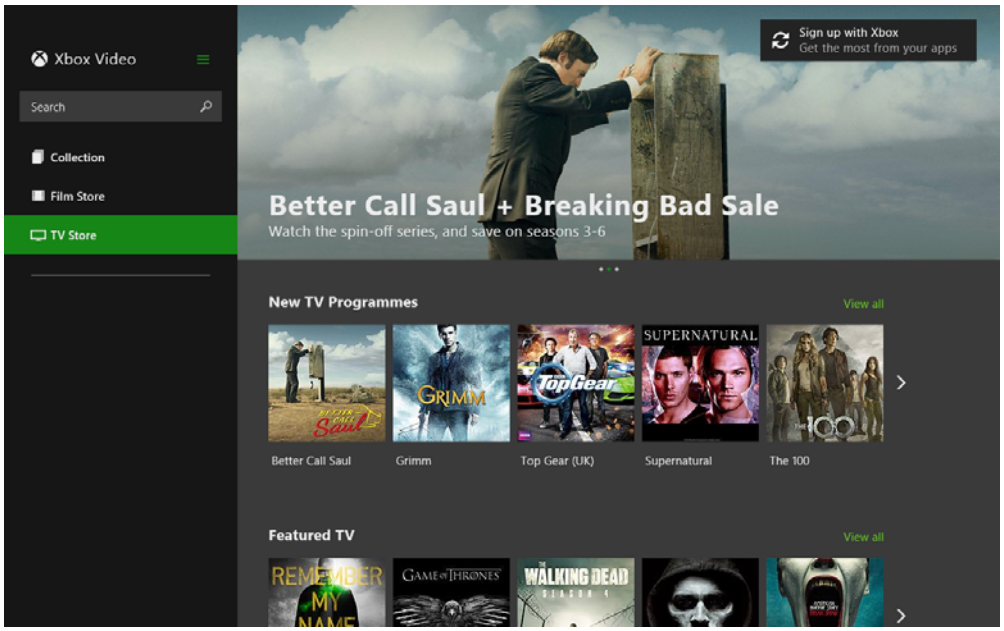

APPLICATIONS

App Store

Your tablet comes with the **Windows Store** as standard, where you can download all kinds of applications, games, music, films and books, etc. For each type of download, you will find intuitive subcategories to help you find exactly what you are looking for at any time.

Important: be aware that not all downloads are free and additional costs may be incurred. For downloads that are not free, the price will appear next to app description, and you will be asked to confirm before downloading to avoid being charged unintentionally.

Preinstalled Apps

To access the list of preinstalled apps, press the icon and slide upwards. You will then see all the apps installed on your device.

Web Browser

Using your web browser, you can open multiple URLs in different tabs simultaneously. Access your browser by pressing the icon at the bottom of the tablet and press the **Internet Explorer** icon. When you open a new tab, you can enter a URL manually or you can follow suggestions in the centre of the screen, which are based on the pages you visit most frequently.

Text Editor, Spreadsheets and Presentations

With this management tool you can create and publish documents, spreadsheets and presentations. You can also sync the application with your OneDrive account, save your files in the cloud and access them remotely via any compatible device. It is compatible with Word, Excel and PowerPoint, and it also reads pdf files. From this application you can also directly attach files to emails.

Calendar

With the **Calendar** tool you can manage your daily tasks and sync them with your electronic email account so that you can share appointments, meetings and events with your contacts. It also enables you to set up reminder alerts and notifications so that you never forget an appointment. The app also allows you to sync the calendar so you can view it from any other mobile device.

To create a new event, access the application, swipe from top to bottom and press **New** ⊕. In addition to this option, you can choose how to view your events, sync with your email or select a background image.

Maps and GPS Navigation

Using the **Maps** application that comes installed on your tablet, you can view your current location on a map, as well as satellite images and real photos of the area surrounding a given point. You can also use the search option to get directions on how to reach a destination from your current location, either on foot or in a vehicle. It also provides a location service to identify affiliated companies and establishments.

NB: your bq Tesla 2 W8 does not have this type of connection, to obtain it you will need wireless connectivity via an external device (for example, a smartphone or USB router, which are not provided with your tablet).

Live Tiles

Weather: shows the temperature and current weather conditions, as well as the forecast for today and tomorrow, based on the current location.

News: displays information of general interest, and you also can add the RSS of your favourite newspapers (if available) to determine which sources of news will be used.

Store: different suggested apps and their prices appear every so often.

Health and Wellbeing: displays daily advice to improve your quality of life, aimed at diet, physical exercise and healthy habits.

Food & Drink: displays daily tips and recommended recipe suggestions.

Sport: similar to the **News** tile, except it only displays news from the sports world.

Money: displays the up-to-date status of key global stock markets.

TOOLS

Calculator

You will find various tools on your tablet, such as the calculator which enables you to carry out basic sums, as well as some more scientific or advanced ones. To switch between the different types of calculator, press **View** and choose from the options available: **Standard**, **Scientific**, **Programmer** and **Statistics**.

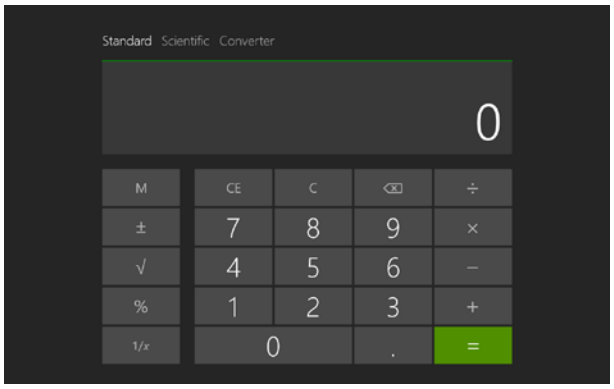

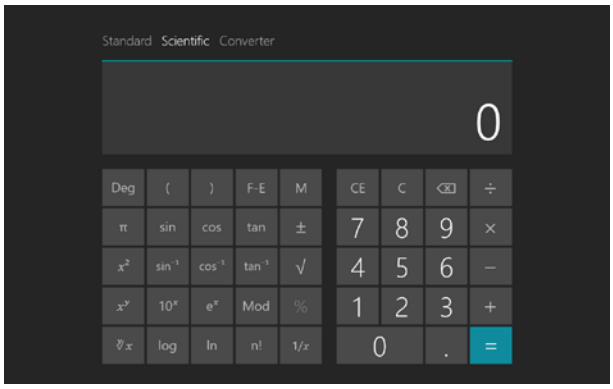

Alarms

Go to **Apps** then **Alarms** to manage all your alarms, and also to access the timer and stopwatch.

You can set up different alarms at the same time, and adjust settings such as the name of the alarm, the number of times it sounds, which days of the week it is repeated, the alarm tone and whether it vibrates or not.

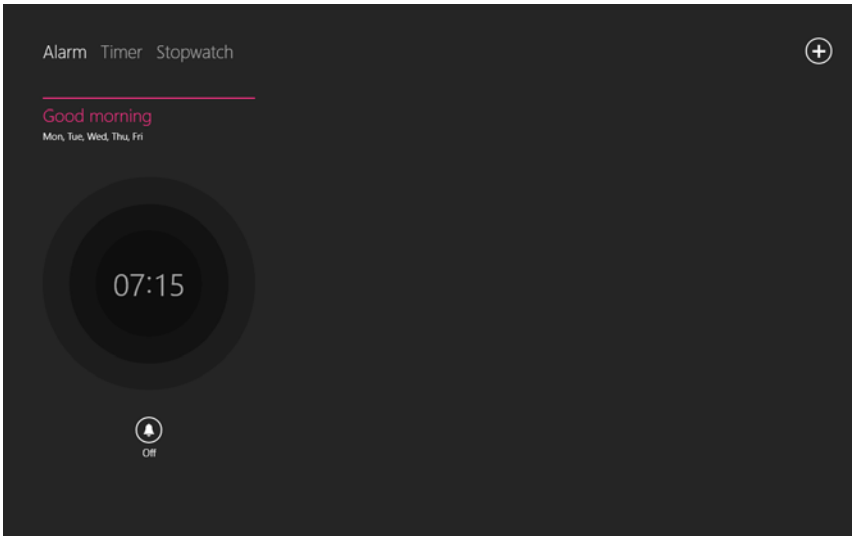

You can create new alarms and delete them as often as you want. To temporarily enable or disable an alarm (without deleting it), simply slide the icon located to the right of the alarm time over to the left.

The **Clock** app also allows you to view the local time in any location around the world, and contains other useful functions such as a fully configurable timer and a practical stopwatch with interval feature.

Sound Recorder

Another of your tablet's tools is the **Sound Recorder**. This app allows you to record audio with ease.

To start recording, simply press the red icon located in the middle of the top part of the screen. The counter above will start. You can pause the recording or end it using the relevant icons. After you have pressed stop, you can play, trim, delete or rename your recording.

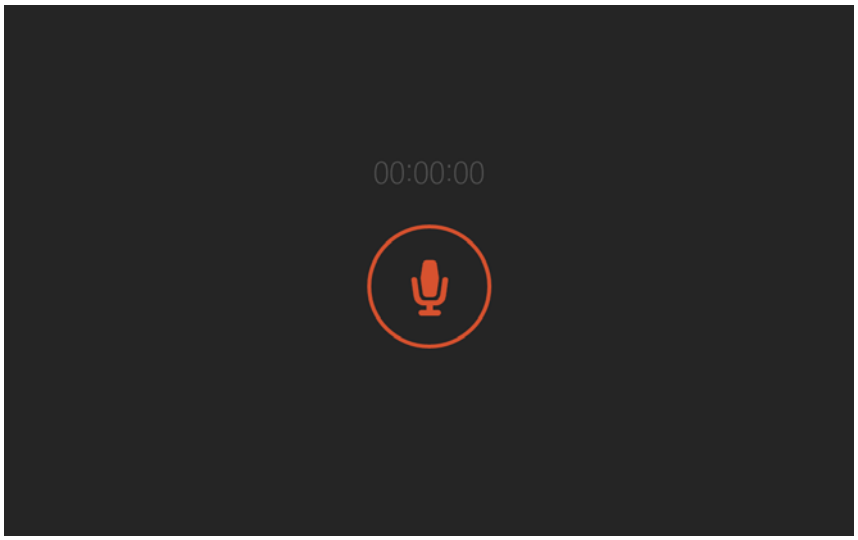

APPENDICES

APPENDIX A: Technical Specifications

You can find all the technical information for your device by visiting this link and selecting the corresponding model: www.bq.com/gb/tablets-prices-sale.html

After selecting your model, you can access the full description by clicking on **Specifications** on the bar at the top of the page.

In the table you will find information on the following:

- Dimensions and weight
- Screen
- Internal memory
- Processor
- Battery
- Operating system
- Connectivity
- System functions

APPENDIX B: Cleaning and Safety

Cleaning

Before cleaning your device, make sure you have switched it off and disconnected all cables. After cleaning, make sure the screen is completely dry before reconnecting any cables and switching the device back on. Do not use any liquid or spray cleaner directly on the surface of the screen or the casing.

Screen: Use a clean, soft, lint-free cloth to remove dust and dirt from the screen. To remove fingerprints and marks, you may apply a small amount of mild cleaning product to the cloth.

Casing: Use a soft cloth with a small amount of mild cleaning product. After cleaning, rinse the cloth in clean water, wring it out thoroughly and wipe the casing to remove any leftover cleaning product.

Safety

To reduce the risk of an accident, follow these safety instructions:

- Do not use power cables, connectors or plugs that are damaged or contain loose wiring. Do not bend or damage the power cable. Do not touch the power cable with wet hands. Do not pull on the cable to unplug the charger.
- Do not use the device while it is charging. Do not touch it with wet hands.
- Do not hit the charger or cause it to fall. Do not charge the battery using chargers that have not been approved by the manufacturer.
- Do not use the device during electrical storms. Handle and dispose of the battery and charger with caution.
- Do not handle Li-ion batteries that are damaged or leaking.
- Do not use the device in the vicinity of a pacemaker. If possible, try to use it at a distance of more than 15 cm from the pacemaker, as it could interfere with the pacemaker's operation.
- Do not use the device in a hospital or in the vicinity of any medical equipment that may be susceptible to radio frequency interference.
- If you regularly use medical equipment, make sure it is protected against radio frequency interference. If you wear a hearing aid, consult the manufacturer with regard to potential interference.

- In potentially explosive environments, switch the device off. Always observe the site regulations, instructions and warning signs ⚠.
- Do not use the device in refuelling areas (e.g. petrol stations) or in the vicinity of flammable and/or explosive chemical products ⚠.
- Do not store or transport flammable liquids or gases or explosive materials in the vicinity of the device or any of its parts or accessories. ⚠.
- Switch off the device upon boarding an aeroplane. The electronic components of a motor vehicle may malfunction as a result of radio frequency interference from the device.
- Prolonged exposure to high levels of sound pressure may cause permanent damage to hearing. It is recommended that you do not wear headphones while cycling, running or walking through areas with heavy traffic or excessive noise.
- Use of the device while driving: Some car manufacturers prohibit the use of mobile devices in their vehicles unless they are equipped with a hands-free kit and external antenna. Ask the vendor of your vehicle whether your mobile device or hands-free Bluetooth kit will interfere with your car's electrical systems. Always devote your full attention to the road while driving and respect the local regulations and laws on the use of wireless devices while at the wheel.
- Location/GPS-based functions: Location-based functions are offered "as is" and "for all corresponding effects". Mundo Reader, S.L. does not claim or in any way guarantee the accuracy of any location-based information.
- When the device is using location-based information, it may suffer from interruptions or failures and its dependence on network availability will increase. Note that functionality may be reduced or obstructed in certain areas, such as inside buildings or in areas close to buildings.
- Use the GPS function with caution, to make sure you are not distracted while driving.
- Antenna: Use of the device with an antenna other than that supplied by Mundo Reader, S.L. may damage it, impair its performance and generate SAR levels (see Appendix D) that exceed the limits established by law. Do not cover the antenna with your hand.
- Flight mode: Use of Bluetooth and WLAN functions may be prohibited on aeroplanes and in other places where radio transmissions are not permitted. In these locations, please request authorisation before enabling any of the device's Bluetooth or WLAN functions, even in Flight mode.

Warning!

This product must be used with a power supply that has the following specifications:

INPUT: 100-240 V ~ 50/60 Hz 0.5 A max.

OUTPUT: 9 V ⎓ 1.5 A

The use of power sources other than the ones indicated may damage your device and pose a risk to the safety of people and property.

APPENDIX C: Information on Exposure to Radio Waves and SAR (Specific Absorption Rate)

The design of this mobile device complies with the current regulations governing exposure to radio waves. These regulations are based on scientific guidelines that include safety margins designed to ensure the safety of everyone, regardless of age or state of health.

The guidelines on exposure to radio waves use a unit of measurement known as the SAR (Specific Absorption Rate). SAR tests are carried out using standardised methods, with the mobile device transmitting at the highest certified level of power on all the frequency bands it uses.

The maximum SAR levels recommended by the ICNIRP (International Commission on Non Ionizing Radiation Protection) is 2 W/kg, measured on 10 g of tissue.

The highest SAR levels recorded for this tablet are as follows:

	Tesla 2 W8
When used in direct contact	0.715 W/kg (10 g)

This device complies with the guidelines on exposure to radio frequency both when it is used in the normal position next to the ear and when it is positioned at least 1.5 cm from the body. In order to send data files or messages, this device requires an adequate network connection. On certain occasions, the transmission of data files or messages may be delayed until an adequate connection becomes available. Until the transmission has been completed, make sure you follow the instructions on separation distance mentioned above.

APPENDIX D: Disposing of this Product Correctly

(Electrical and electronic waste).
(Applies within the European Union and in European countries with selective waste collection systems).

To prevent any damage to the environment or human health, separate these products from other types of waste and recycle them correctly. This will help promote the sustainable use of material resources.

Household users should contact the retailer that they purchased the product from or the relevant local authorities to find out how and where they can recycle this product safely and without harming the environment.

Business users should contact their supplier and consult the terms and conditions of the purchase agreement. This product and its electronic accessories should not be disposed of with other waste materials such as the box and non-electronic materials.

APPENDIX E: Declaration of Conformity

Mundo Reader, S.L.
Pol. Ind. Európolis
Calle Sofía, 10
28232 - Las Rozas - Madrid (Spain)
Tel. +34 91 787 58 59
CIF: B85991941
Made in China

Declares that this tablet:

bq Tesla 2 W8

complies with the provisions of Directive 1999/5/EC on Radio and Telecommunications Terminal Equipment (R&TTE), Directive 2006/95/EC on Electrical Safety for Low Voltage Equipment, and Directive 2004/108/EC on Electromagnetic Compatibility, in addition to the following harmonised standards:

EN EN60950-1/A2:2013, EN 50566: 2013, EN 62479: 2010, EN 62311: 2008, EN 62209-2: 2010, EN 301489-1 V1.9.2, EN301489-3 V1.6.1, EN 301489-17 V2.2.1, EN 55022:2010/AC:2011, EN55024: 2010, EN 61000-3-2/A2:2009, EN 61000-3-3: 2008, EN 300328 V1.8.1, EN 300440-2 V1.4.1.

You can request a copy of the Declaration of Conformity by writing to the address given above.

Madrid, November 2014.

Alberto Méndez Peydró
CEO

CE 0168

Firmware version

bq Tesla 2 W8: 20141205_2323

www.bq.com
www.mibqyyo.com